
# Lutron®-Horizontal Sheer Blind Selection Guide

Residence:		Area:	Window(s):
Step 1	Select Tu	ube/Vane Size	
	$\bigcirc$		Optional Top Treatment
2" Vane /	1%" tube	3" Vane / 2½" tube	
Step 2	Select N	lounting Option	


#### IMPORTANT

Horizontal sheer blinds are built to a single, specific height. The blind is tilted to the View position when fully extended. Please verify exact shade height that is required for your application to the nearest 1/16 inch. The height measurement includes the top assembly and bottom bar, so the dimension provided should reflect the height needed from the top of the assembly in its mounted position to the fully lowered bottom bar location (at the window sill, floor, etc). When in the Closed position, the blind maintains a gap of 3/8" between the bottom of the blind and the window sill, floor, etc.



#### Step 2 Option A: Inside Mount Measurements

- To use inside mount, the window depth must be at least: 2 1/4" (57 mm) for both 2" and 3" vane
- To be fully recessed, the window depth must be at least: 3 5/8" (92mm) for 2" vane, 4 1/4" (108mm) for 3" vane
- Do not make any deductions from the width. Lutron will deduct 1/16" (2 mm) per side on inside mounted shades to allow room for proper operation.
- Width limitations: 2" vane (24"-96"); 3" vane (24"-114")
- Lutron will make NO additions or deductions to the height measurement.

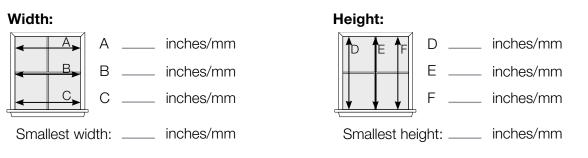


## **Step 2 Option B:** Outside Mount On Trim Measurements

Width: The width of your shades is up to you. For example, if you'd like to completely cover the window, measure from edge to edge of the frame.


**Height:** Measure from the top of the trim to the windowsill.



Order width: inches/mm



Order height: inches/mm




### Step 2 Option C: Outside Mount Above Trim Measurements


Width: The width of your shades is up to you. For example, if you'd like to completely cover the window, measure from edge to edge of the frame. **Height:** Determine where you're going to mount the shade. Then, measure from where the top of the mounting bracket will be located\* down to the windowsill.

\*Note: The top of the installed mounting bracket must be at least 5 in (127 mm) above the top edge of the window trim



Order width: \_\_\_\_\_ inches/mm





#### **Step 3** Select Fabric

Fabric and Color Name (Note: See Fashion Fabrics binder or www.lutron.com/fabrics)

Fabric Model Number \_\_\_\_\_

### Step 4 Select Top Back Cover Color

The selection here will determine the color of your top-back cover. Choose any color other than white will result in an increased charge.

White (default)	Bronze
Black	Light Ivory
Clear Anodized	Slate Grey

#### **Step 5** Select Hardware Color (for fabric-wrapped fascia only)

The selection here will determine the color of your fabric-wrapped fascia endcaps.

Lutron-recommended color	Bronze
(pre-selected to coordinate with fabric color)	Taupe
Clear Anodized	Light Ivory
White	Slate Grey
Black	,
Custom Color	

**Please note:** Product options may vary depending on application and intended use. For more technical information, reference the Lutron shading solutions product guide (P/N 367-1455) located at **www.lutron.com** or work with your Lutron qualified installer. Product availability is subject to change.

Please contact your local Lutron sales representative for more information on ordering product.

Please visit **www.lutron.com/fabrics** for more information or download the Lutron Design Collections app at the Apple<sub>®</sub> store.



 World Headquarters 1.610.282.3800
 24/7 Technical Support 1.800.523.9466
 Customer Service 1.888.LUTRON1 (1.888.588.7661)

 © 01/2017 Lutron Electronics Co., Inc.
 P/N 368-3304 REV C
 save



